


# The names of each part and its function

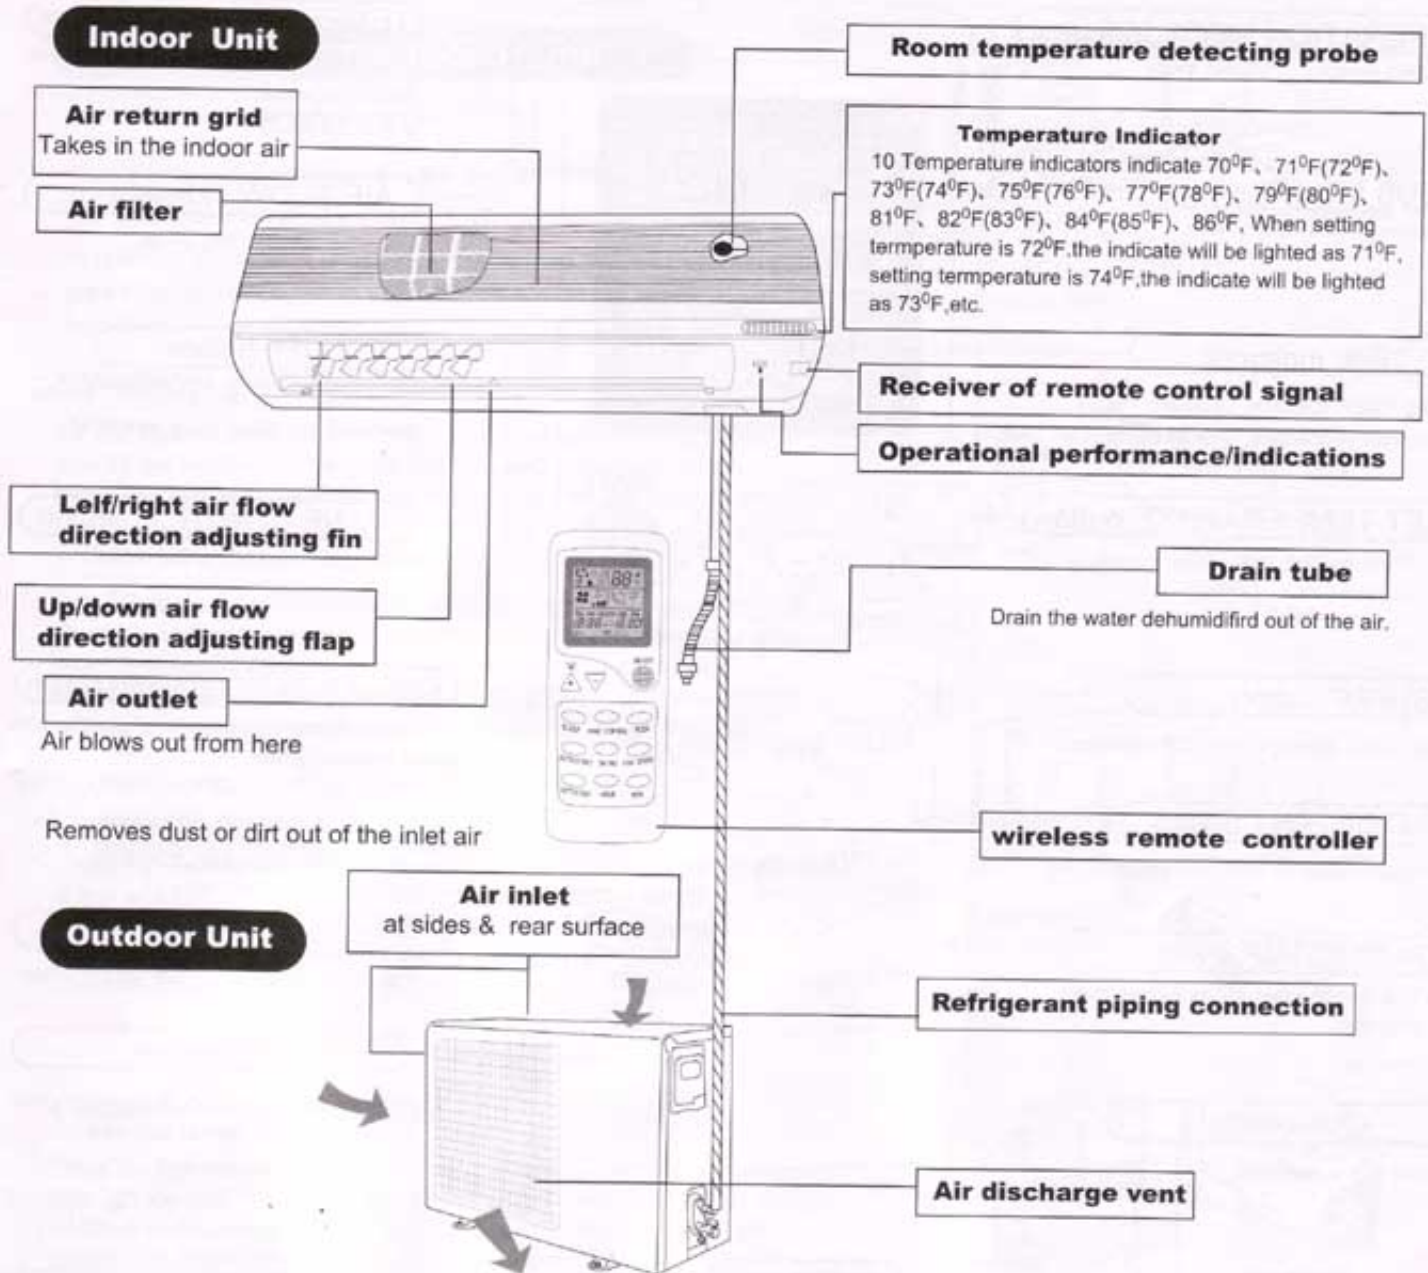

## Unit operation section


### How to open



Lightly push both sides of the air inlet grid at the bottom and pull it to this side till a resistance is felt.

### How to close

Push down the air inlet grid and the push both sides of air inlet grid at the bottom.

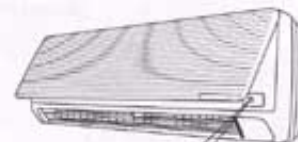

Emergency operation key

This button can be used as an emergency measure to turn on/off unit when remote controller is not available.

● **Note:** Do not open the grid at an angle over 60 degrees. Do not operate the units with too much force.