



Operation and indication sections of remote controller

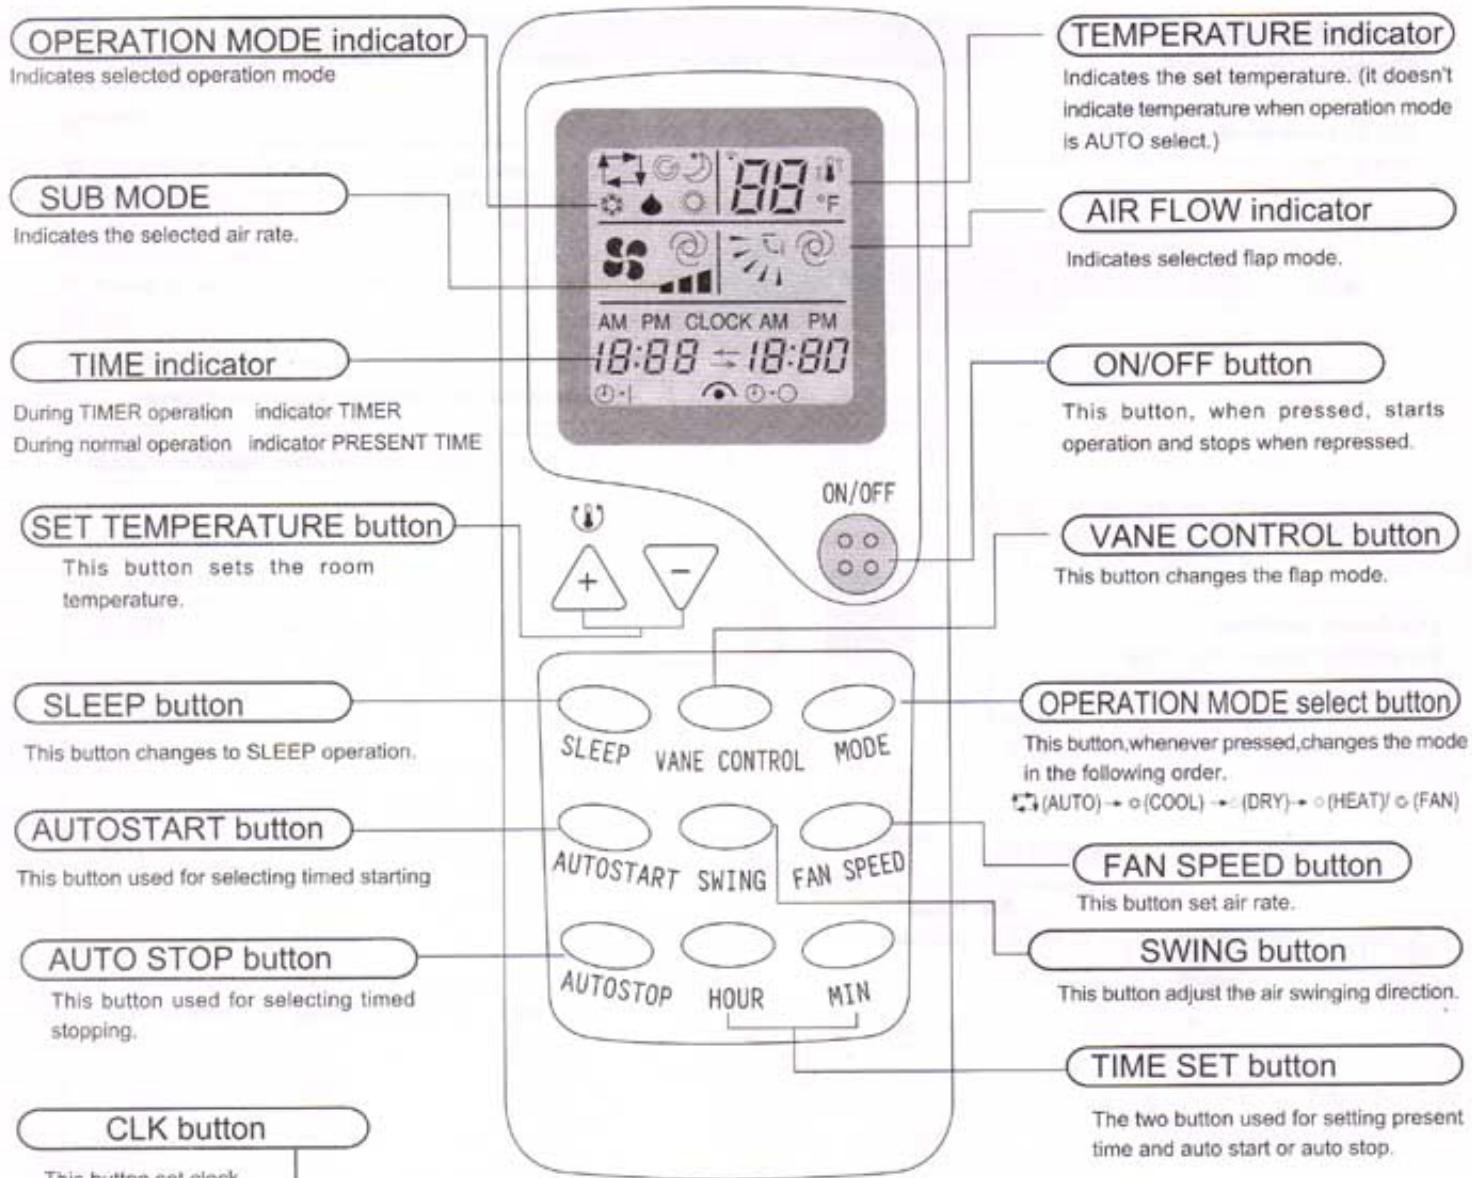

NOTE
Above figure shows all indications for the purpose of explanation, but practically only the pertinent. When air-conditioner is cool-mode, the HEAT change to FAN.

Transmission procedure

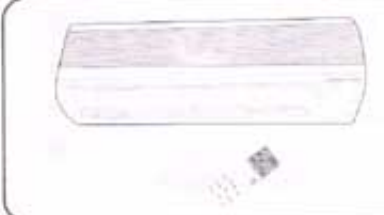

When each button on the remote controller is pressed with the remote controller pointing toward the air conditioner unit, signal is sent. When the signal is received correctly, the receiving sound is emitted from the unit.