



Treatment at service call


Please check the following before requesting after-sale service from your dealer .

The air conditioner does not operate at all .




<p>Is the power in an outlet ?</p>	<p>Is the time set to "ON" position ?</p> 	<p>Is there a power failure or a blown fuse ?</p> 
------------------------------------	---	---

Room temperature can't be controlled .
(Too cold or too hot)




Is the room temperature setting too low or too high?



Poor cooling or heating performance .

<p>Is the room temperature setting suitable ?</p> <p>suitable TEMP</p> 	<p>Are the air filters clean (Not clogged) ?</p> 	<p>Are the window (s) and door (s) opened ?</p> 
--	--	---

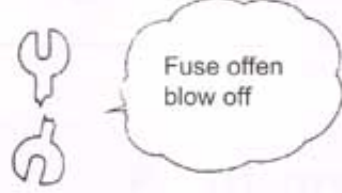



Poor cooling performance .

<p>Is direct sunlight entering the room ?</p> 	<p>Is there a heat source in the room ?</p> 	<p>Are there too many people in the room ?</p> 
---	---	--

If the air conditioner does not operate properly ever after conducting the above checks , when the doubt still remains even after consulting page 11 or in case that such phenomena as those shown below, turn off the power and contact your distributor .

Cases requiring immediate contact with the distributor

Pull out the power plug immediately and inform to your distributor in the following situations:

<p>Fuse or breaker often blows off</p> 	<p>Malfunction is observed TV , radio or other devices .</p> 
<p>Switch dose not actuate surely</p> 	<p>Abnormal noise is heard during operation</p> 

When faulty operation movement is observed when the RUN button is pressed , even after restarting the operation after 3 minutes , faulty movement does not disappear .

