


INSTALLATION

Selection of installation location


Put the mobile air conditioner in a flat location where the air outlets cannot be covered up, place the unit no less than 50cm away from a wall or other obstacle.

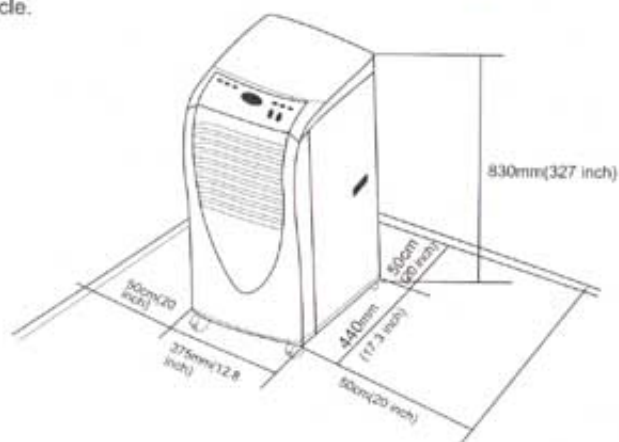

The air exhaust duct mounting method


- 1) Fix the square end of the exhaust duct to the exhaust terminal of the unit
- 2) Put the other end (discharge) to the nearest window Attention: The length of the air exhaust between 600mm-1800mm, Use the Min length when working, we suggested

When mounting, try to keep the air exhaust horizontal not permit enlarge or connect the other discharge or will cause malfunction.


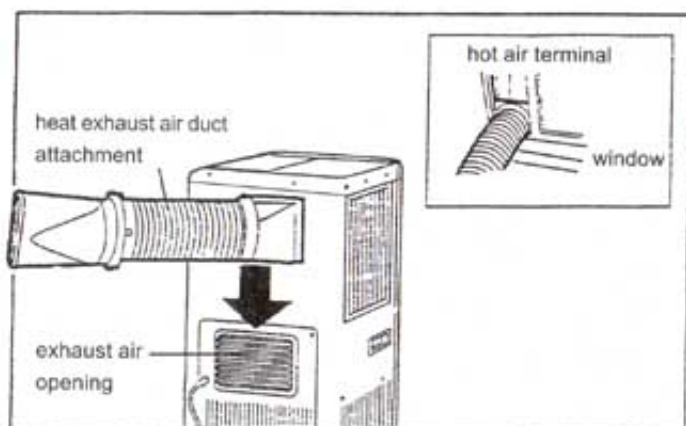


INSTALLATION

Correct mounting shown below (If mounting in the wall, the height of the hole should be 40cm-130cm)

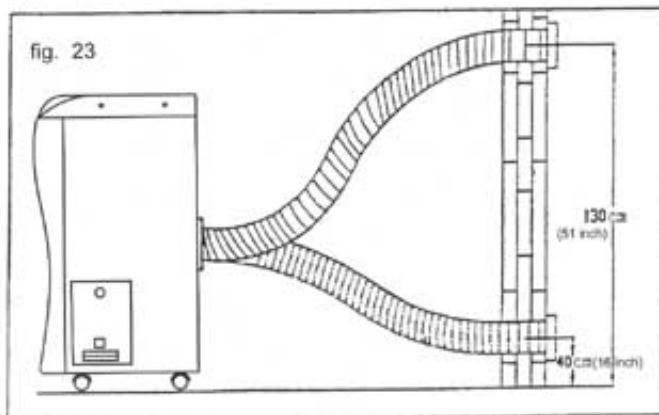


If the air exhaust requires bending, see below.

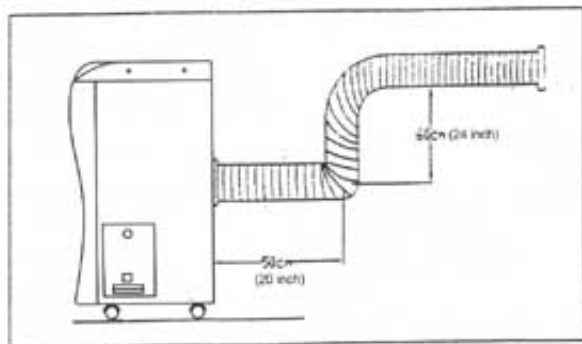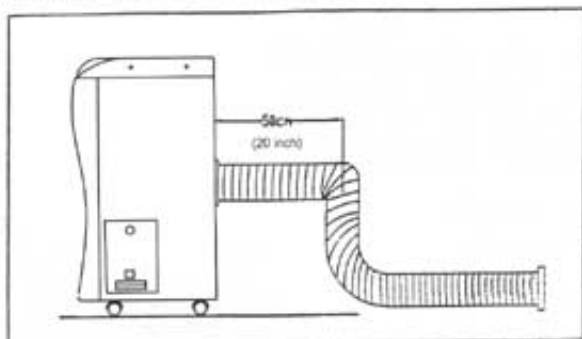


INSTALLATION

Incorrect hose mounting (Air exhaust bend too large, easily cause malfunction).

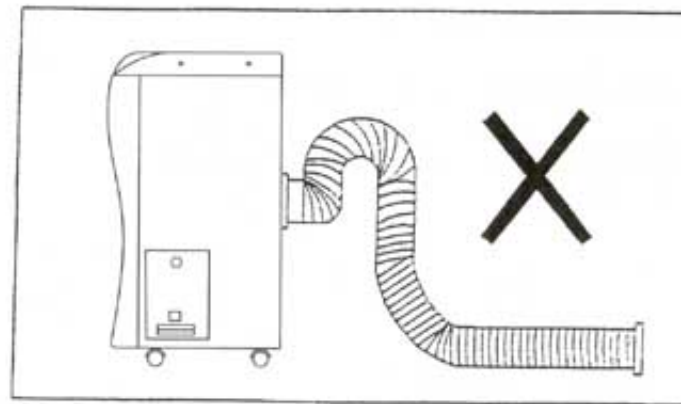

Window Kit Installation

Your window kit has been designed to fit most standard "vertical" and "horizontal" window applications. However, it may be necessary for you to improvise/modify some aspects of the installation procedures for certain types of windows. Please refer to Fig. 24 & Fig. 24a for minimum and maximum window openings.

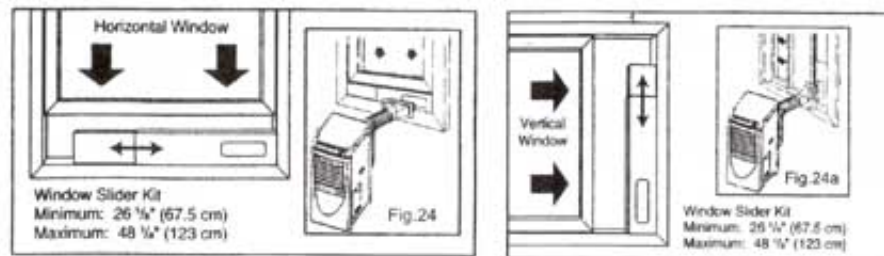

Water Tank Safety Feature

This unit is equipped with a fail-safe switch mechanism which prevents the unit from condensing water in the event the water tank is accidentally displaced, and/or FULL with water. If this situation occurs, the unit will signal 8 BEEPS and the WATER FULL indicator light will flash red continuously until the water tank is correctly positioned and/or emptied.

NOTE: The fan motor will continue to operate under this condition. This is normal, but no cooling or dehumidifying will occur until the tank is emptied and/or correctly installed (It may take several minutes before the compressor resumes normal operation).

INSTALLATION

Installation Accessories Fig. 25

Description

Flexible exhaust hose with adapters.....3/set
stretches from 19 1/2" (50 cm) up to 78 3/4"(200cm)

Window exhaust adapter (flat mouth).....1pc

Adjustable window slider kit.....2/set
from 26 5/8" (67.5 cm) up to
48 3/8" (123 cm)

Drain hose connector.....1 pc
continuous drain option (hose not included)

SPECIAL NOTE:Exterior drain hose extension is not included with this unit and can be purchased through any local Hardware Store.

The program for the continous drainage.
take off the seal of drainage tube (location as i
in the picture)
Extend the tube outside the unit for drainage,as
the indication.
Pay attention to putting the tube in the proper
position in order to avoid the electric control
working abnormally.

Power roll wire clasp

Fix the roll wire at the back of the air guide
plate with the clasp.
wheel the supply cord around the clasp
when the unit stops operating!

Fig. 25 Installation Accessories

