



PRESENT TIME SETTING PROCEDURE

When cells are inserted, the present is automatically set to AM 12:00 EX: Set to AM 10:30



- 1** Press the CLK button.
Unload the back cover push the clock button with the tip of a ball pen, etc. The time indicator is flickering and can set the present time.
- 2** Press the HOUR button. (Set to AM 10:)
- 3** Press the MIN button. (Set to 30)
- 4** Press the CLK button again, then reattach the back cover.

NOTE The timer is set on the basis of the present time. So set the present time correctly.