

# USE OF CONTROL PANEL

## DEHUMIDIFYING AND COOLING OPERATION

The operating ranges for cooling operation is 17°C-31°C (or 63°F-88°F) and the operating range for dehumidifying is 20°C-31°C (or 68°F-88°F).

## POWER SOURCE

- The AC socket must be firm and reliable.
- Don't connect the mobile air conditioner to a multiple socket outlet which is also being used for other electrical appliances.
- Insert the AC power plug securely into the AC socket before using the unit, when it beeps after two seconds, press "Ⓜ" button, the unit begins to run.

## COOLING OPERATION

1. Ensure that the drain tank is properly placed in the unit.
2. Repeatedly press "Ⓜ" button to choose the cooling mode, LCD window will show "cool". During the cooling operation, always place the duct through an open window open to exhaust warm air from the room.
3. Repeatedly press "Ⓝ" button to set a proper room TEMP. at 17°C-31°C (or 63°F-88°F).
4. Press "Ⓢ" button to choose a proper fan speed, high, middle, low speed.
5. Press "Ⓦ" button to adjust the air delivery direction, The LCD window will show "↻".

### NOTE:

In order to improve the cooling efficiency, be careful that:

- a) If your room is directly exposed to the sun, draw the curtains please.
- b) Do not place near other heat source.

## DEHUMIDIFYING OPERATION

1. Keep the windows and the doors closed to aid in effectively dehumidifying the room.
2. Ensure that the drain tank is properly placed in the unit
3. Repeatedly press "Ⓜ" button to choose the dehumidifying mode, LCD window will show "DRY", the fan speed cannot be adjusted.
4. When used as dehumidifier only, do not use the air exhaust duct.

## HEATING OPERATION

1. Repeatedly press the "Ⓜ" button, select the heat mode, The LCD window shows "HEAT".
2. Press "Ⓝ" button to set a proper room temperature at 17°C-31°C (or 63°F-88°F).
3. Press "Ⓢ" button to choose the fan speed: high-middle-low.
4. Press "Ⓦ" button to adjust the air delivery direction, The LCD window will show "↻".

### TIME SET FUNCTION

To set time to start the machine with the unit off (but power supplied), press "⌚" button, the LCD window will show "00:00", press the TIME button, set the time to start as you like. The setting range is 1-12 hours.

To set time to stop the machine with the unit running, press "⌚" button, the LCD window will show "00:00", press the TIME button, set the time to stop the machine as you like. The setting range is 1-12 hours.

### AUTO SWING FUNCTION

1. Auto swing function

press "🌀" button, LCD window will show "🌀", and then begin to swing automatically.

2. Press once again "🌀" button, the symbol "🌀" in the LCD window will disappear, the swing stops.



### Attention:

Press "⏸" and "⏹" buttons together for more than two seconds will lock the keys LCD window will show "🔒", press the two buttons again unlock the keys, the symbol "🔒" will disappear.

## WATER DRAINAGE METHODS

### WATER DRAINAGE

When in cooling or dehumidifying mode, the dew water will drain into the tank. When the tank gets full, the WATER FULL indicator is flickering. As shown in the Fig. 1, 2 and 3, take out the water tank, pour out the water inside the tank, then push it back to its original position.

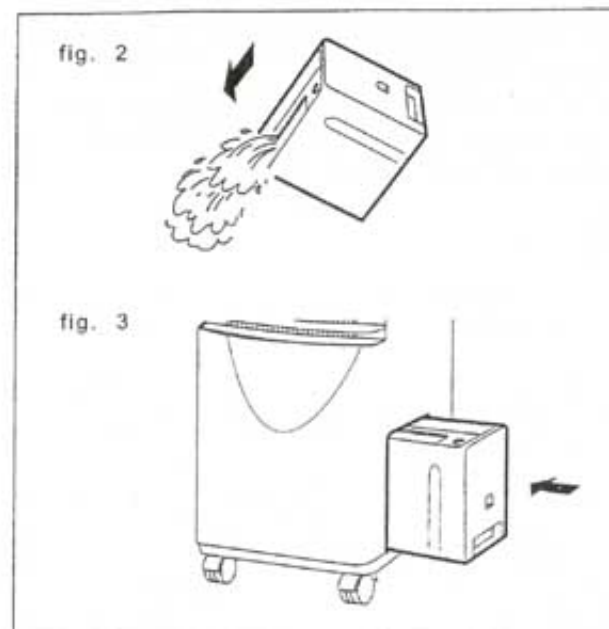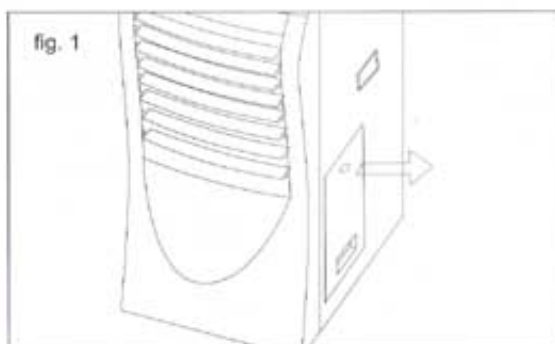

### CAUTION

1. When in cooling or dehumidifying mode, do not take out the water tank, or the buzzer will sound and the compressor stops, and the mode changes to FAN.
2. If you want to take out the tank before the water becomes full, please stop the machine first, and wait for 3 minutes, to prevent the dew water spilling into the unit.
3. There is a plastic pipe inside where the tank is placed. Do not remove the stopper while the unit is working because the water is used for cooling the copper duct.