 


## 5-Putting into service-Temperature settings


-After 48 hours, Turn the On/Off switch (I/O) on the right of the control panel to the On position (I). The green cold circuit On indicator light will light up if the temperature is set at below ambient temperature (unless your cabinet is a single-temperature Vieillitheque and located in an area where the temperature is below 12°C)

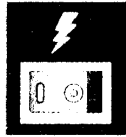

**In the event of an anomaly, refer to section 8.**

### SETTING TEMPERATURE ON VIELLITHEQUE MODELS (1-temperature)

The temperature of your wine cabinet is entirely controlled from the control panel, which is shown below:

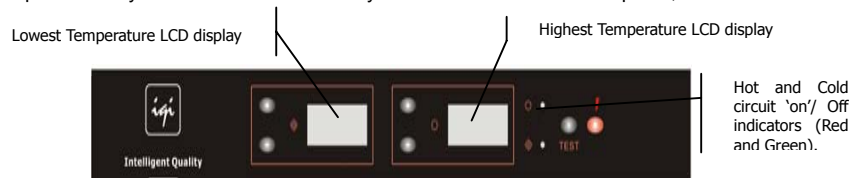

- LCD display: Displays the temperature inside your wine cabinet.
- Setting knob: Used to select the desired cabinet temperature.
- Operation indicators: Indicates operation of the hot (red) or cold (green) circuit. TEST button: Used to test the operation of the cabinet's circuits (see section 8).

#### To set the temperature of your Vieillitheque:

You can set the temperature as you desire by pushing the button ▲ or ▼.


The temperature that you desire to set will increase 1°F or 1°C if you push the ▲ once, on the contrary the temperature will decrease 1°F or 1°C if you push the ▼ once.

**NOTE:** To operate correctly, your cabinet must be placed in a room whose temperatures range from 0 to +35°C (32° to 92°F). Recommended setting range: 0 to 14°C (32° to 57°F)

It is possible, even if the settings in this manual are respected, that you will be unable to obtain the precise temperature desired. Each case is individual and slight setting adjustments may be necessary.

### SETTING TEMPERATURE ON SERVITHEQUE MODELS (multi-temperature)

Your wine cabinet's temperatures are entirely controlled from the control panel, which is shown below:

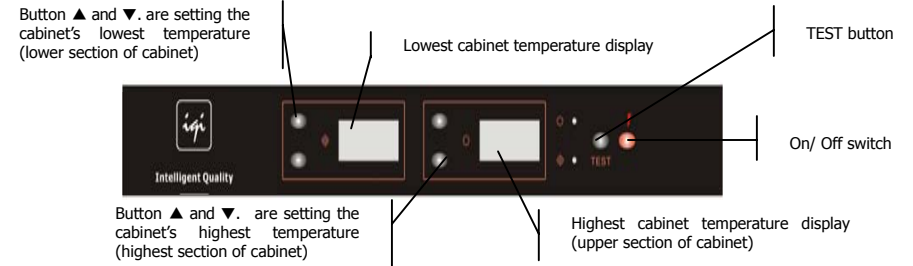

- LCD display: Displays the temperature inside your wine cabinet.
- Setting knob: Used to select the desired cabinet temperature.
- Operation indicators: Indicates operation of the hot (red) or cold (green) circuit.
- TEST button: Used to test the operation of the cabinet's circuits (see section 8).


#### To set the temperature of your servitheque cabinet:

Set the temperature as you desire by pushing the button ▲ or ▼. The temperature that you desire to set will increase 1°F or 1°C if you push the ▲ once, on the contrary the temperature will decrease 1°F or 1°C if you push the ▼ once. (this temperature will be obtained in the lower section).



#### Recommended setting range: 7 to 12°C (45° to 54°F)

Set the temperature as you desire by pushing the button ▲ or ▼. The temperature that you desire to set will increase 1°F or 1°C if you push the ▲ once, on the contrary the temperature will increase 1°F or 1°C if you push the ▼ once. (this temperature will be obtained in the lower section).

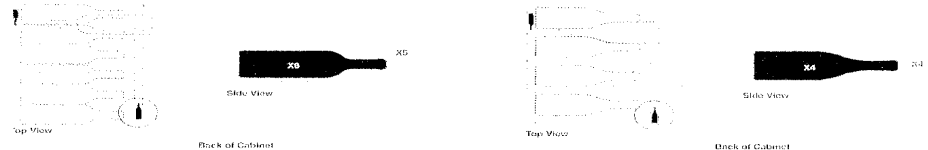

#### Recommended setting range: 15 to 21°C (59° to 70°F)

To operate correctly, a Servitheque cabinet must be placed in a room whose temperatures remain between 12 and 35°C (54° TO 92°F).

It is possible, even if the settings in this manual are respected, that you will be unable to obtain the precise temperature desired. Each case is individual and slight setting adjustments may be necessary,