

7-Routine maintenance

Your cabinet is easy to operate and has proven its reliability. It will provide long-lasting satisfaction if you follow the simple maintenance and cleaning operations listed below.

- Replace the activated charcoal filter in our cabinet's upper ventilation hole half a year (your dealer keeps this accessory in stock).
- Remove dust from the condenser (metal screen on the back of the cabinet) twice a year.
- Make sure the power cord is unplugged before cleaning the back of your cabinet, or before moving it.
- Clean the inside of your cabinet thoroughly once a year, after unplugging and unloading it (use water and a mild cleaning product, then rinse carefully).
- Put the power switch on the "0" position, then unplug the cabinet before changing the temperature display battery (ies). Remove the display(s) through the front of the control panel, as shown below.



Use silver oxide LR-44 battery

When the battery has been replaced, put the sensor wire back into the panel, and clip the display unit back in.

To assure that your wine cabinet provides long-lasting service, you should check it regularly and inform your dealer if you note anything unusual.